


SpeedRL Mechanical Instruction Sheet

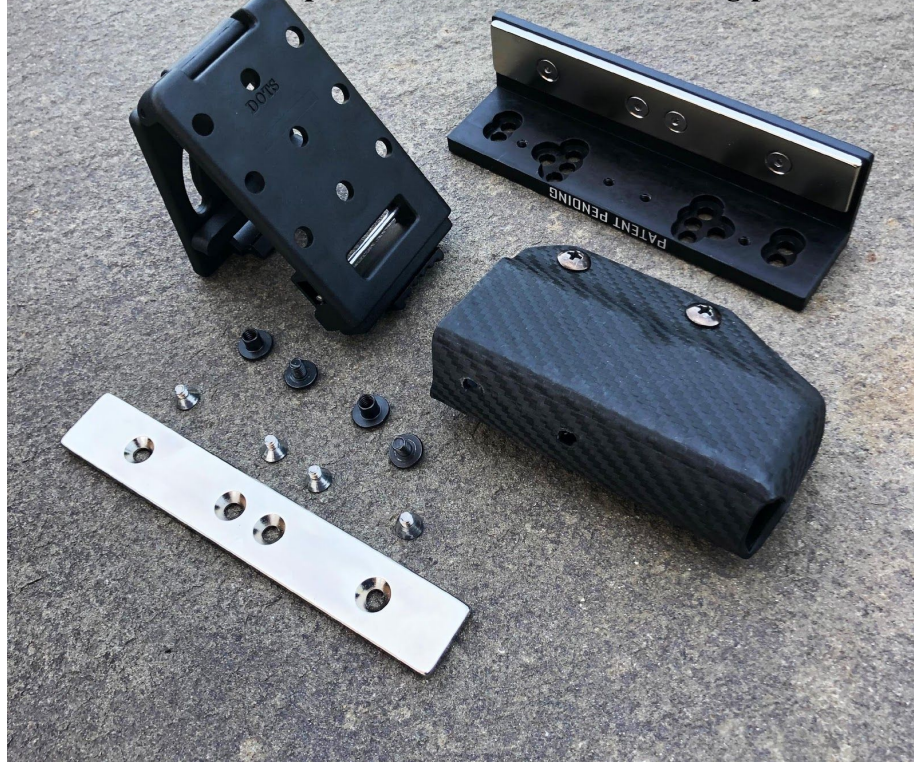

To add the UM Tactical Big Stick mag pouch first remove the SpeedRL from the CompTac PLM belt mount, then attach the mag pouch onto it at the angle of your choosing, and attach the SpeedRL to the front of the mag pouch ...



Attach the UM Tactical Big Stick mag pouch onto the CompTac PLM belt mount at the angle of your choice, then attach the SpeedRL onto the front of the mag pouch



Re-Attach the Magnet and you are good to go!!



The Techwell SpeedRL
UM Tactical Big Stick
CompTac PLM